

American DJ® User Instructions



**GOBOS
ROTATE !**



CAUTION! Read instructions before installing or plugging unit in.

SPECIFICATIONS: MODEL - rotogobo™

Weight: 5 lbs.
Size: 5" H x 6" W x 9" L
Lamp: ZB-JCR 12V 100W
Fuse: 2A
Voltage In: 120V
Working Position: Any Safe position
Duty Cycle: None
Optional accessories: RG/Dichroic colors, RG/4-color
RG/Prism and custom gobos are available, contact your dealer.

HALOGEN LAMP WARNING!

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch lamp with bare fingers as the oil from your hands will shorten lamp life. Also, never move fixture until lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.

Thank you for purchasing the rotogobo™ by American DJ®. For your convenience the rotogobo™ has been lamped and is ready to be used, there is no assembly required. Please read the following instructions before installing or using your new rotogobo™.

Operating Instructions:

Unit is ready to be hung or set on flat surface. Unit will rotate gobos slowly. Motor rotation will start when unit is turned on/off. For best results, we suggest using fog or special effects smoke when using this unit. This will enhance the effect allowing you to see the beams of light. Use an American DJ® high quality mobile pro fog machine.

Caution! Never open unit when in use. Always disconnect main power before serving or replacing lamp. Remember always replace same lamp and fuses.

Lamp replacement: Remove four screws from back of unit, not the ones holding the fan, and slide out back of unit and disconnect lamp from socket. Remove and replace lamp.

Gobo replacement: Follow lamp replacement then carefully remove snap ring around gobo remove and replace.